

GOOD TILING PRACTICE

Tile to be installed to BRANZ recommendations, industry standards, and tile adhesive manufacturer's specifications. See Approved Waterproofing and Tile Adhesives List Page. The tiling membrane and shower tray paint-coating are to be kept clean and protected from dust, dirt, grit, and other trades

WATERPROOFING

Liquid-applied waterproofing is to be applied to the shower walls and tiling membrane on the shower tray

CEMENTITIOUS TILE ADHESIVE

Once cured, the base is ready for the application of tile using cementitious polymer-modified tile adhesive or epoxy tile adhesive. See the Approved Waterproofing and Adhesives List. Use according to adhesive manufacturer's recommendations

WALL TILE / TRAY TILE JUNCTION

It is recommended the shower tray is tiled before the application of wall tile. Silicone joint-sealant is to be applied to the wall / tray tile junction only at the completion of tile installation. To ensure correct drainage of moisture behind the wall tile DO NOT apply sealant prior

WASTE-OUTLET GRATE / TILING APPLICATION


CORNER WASTE-OUTLET -- The correct position of the stainless-steel grate is determined by placing the grate over the tray drain hole at a distance away from both walls equal to the combined thickness of the wall tile and thinset adhesive. With the grate in the correct position, cut away the tray tile as required. Ensure the grate finishes flush with the installed tray tile by adjusting the nylon screws on the grate's outer frame-tray. See detail Page 2

TILE SET-OUT -- CORNER DRAIN


Position drain-grate on tray allowing for wall-tile thickness and thinset adhesive as shown. Cut tray tile tightly around drain grate. Install tile in straight pattern, ensuring tile finishes flush with drain grate. Apply extra tile adhesive under tiles if larger tiles are rocking.

NOTE: Cutting tiles diagonally from corners to waste-outlet is not required.

CORNER DRAIN / TILE SET-OUT

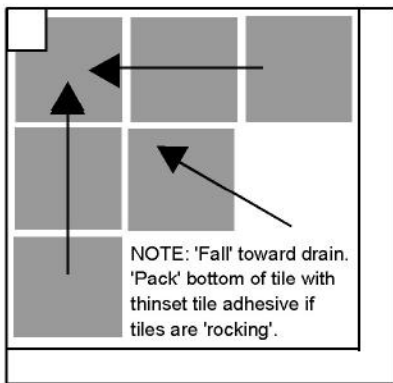


DRAIN GRATE / TILING DETAIL

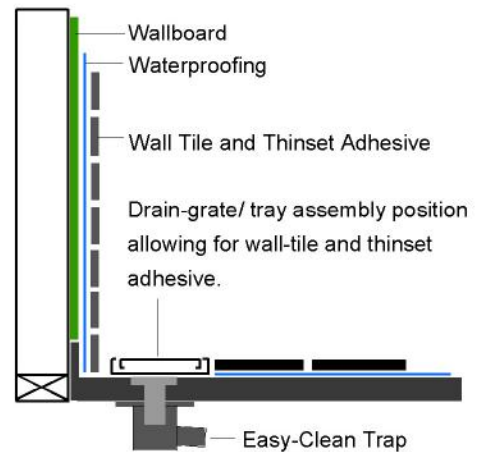

TILE SETOUT -- CENTRE / NON CORNER DRAIN

Shower is supplied with a tileable-insert drain cover. Adjust drain cover height to shower base tile thickness. Install tile into tileable drain cover. Install shower base tile so as to finish flush with tile insert drain cover.

CENTRE DRAIN / TILE SET-OUT

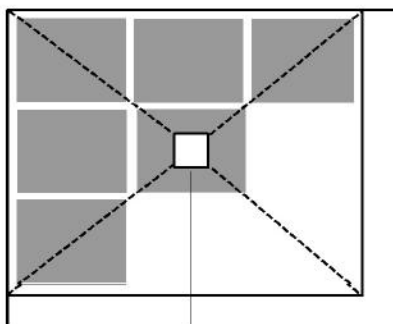

Adjust Drain Cover height to suit tile thickness

CENTRE / NON-CORNER DRAIN TILING DETAIL

